 


不見不散[®]
SEE ME HERE

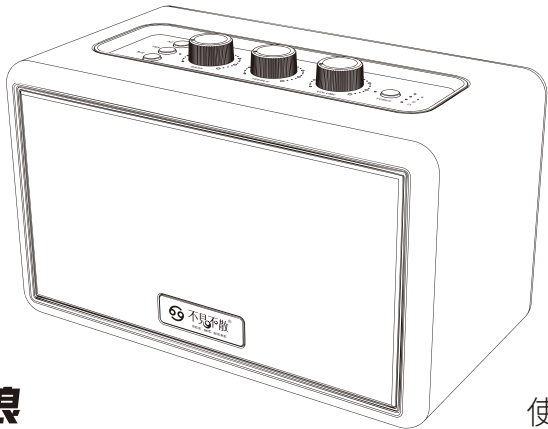

WAVE热浪

W100蓝牙音箱

使用说明书

USER MANUAL

Table of Contents

01 - 07 English

08 - 14 简体中文

 
01 Precautions

English


- ◆ Please read the instruction first.
- ◆ Please follow the instruction carefully.
- ◆ Please store and use this product at room temperature.
- ◆ Do not use this product near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ◆ Do not block the opening of the speaker, and do not insert objects into the vents or slots of the speaker.
- ◆ Do not throw and drop the product to avoid damages.
- ◆ Please charge the speaker with product rated voltage.
- ◆ If the connection line does not match your device, please contact the dealer.
- ◆ Please keep volumes of the speaker mode rate to avoid temporary or permanent hearing impairment.
- ◆ No matter the equipment is damaged due to any reason, it must be repaired by professional maintenance personnel in time. Unauthorized disassembly will invalidate the warranty.
- ◆ If the battery is not properly replaced, there will be an explosion accident, which can only be replaced with the same type of battery.
- ◆ Do not disassemble, impact, squeeze or throw in to fire; If severe swelling occurs, do not continue to use; Do not place in a high temperature environment, do not use after the battery is soaked in water.
- ◆ Battery (battery pack or combined battery) can not be exposed to such conditions as sunshine, fire or similar over heating conditions.
- ◆ If consumers use a power adapter to charge, they should purchase a supporting power adapter that has obtained CCC certification and meets the standard requirements.

02 Packing List

English

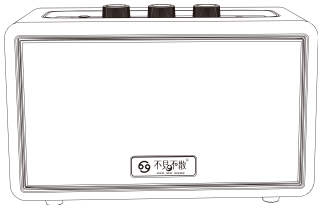

Bluetooth Speaker 1pc

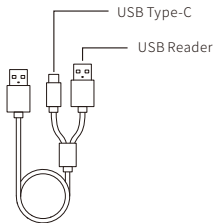 

USB Type-C charging/data cable 1pc



 
3.5mm audio cable 1pc



User Manual 1pc

03 Key Functions

English

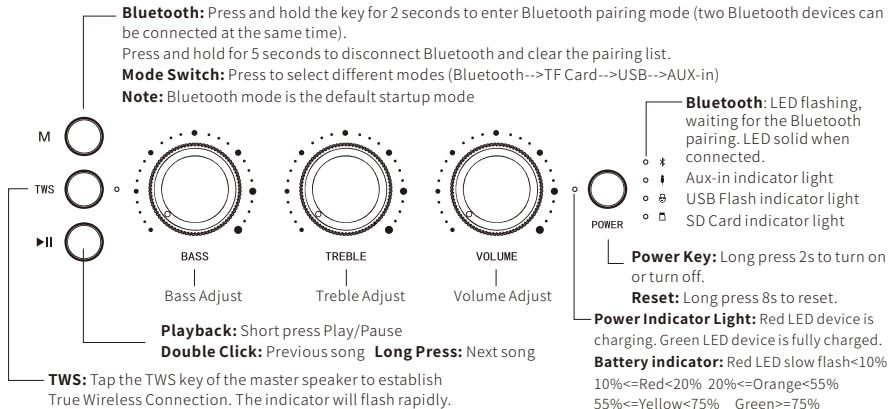


04 Ports Function

English

Data Transmission

 Audio and data files can be copied/read/written on to the Micro SD memory card when the music player is off and connected to a computer via the data cable in the box.

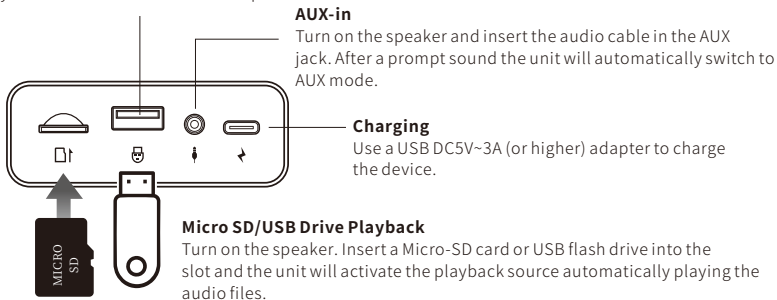

05 Bluetooth Connection

English

1. Turn on the speaker

Press and hold the "M" key for 2 seconds to enter Bluetooth pairing mode. The Bluetooth LED indicator will flash rapidly.

 
2. Connect to a Bluetooth device

Go to the Bluetooth menu of the device and search for "WAVE W100". The indicator light for the "M" key will stay on once connected followed by a prompt tone.

Other:

01- Long press for 5 seconds to disconnect Bluetooth and clear paired list.

02- The WAVE W100 supports connecting two units at the same time.

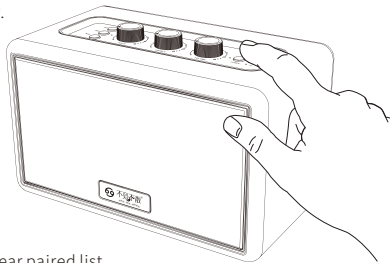

06 TWS(TrueWirelessStereo)function

English



Master speaker



Slave speaker

1. Initiating the master TWS connection

Select one of the W100 units to start and select Bluetooth mode. Press the TWS key. When you hear the prompt tone, the unit will enter TWS mode and start to search for the slave speaker.

2. Connecting the slave speaker

Power on the second W100 unit and select Bluetooth mode. Press and hold the "M" key for 2 seconds and wait for the master W100 unit to connect.

3. TWS connected successfully

When the master and slave units are successfully connected and a TWS setup is created, the TWS key indicator on the master W100 will flash slowly, while the TWS key indicator on the slave W100 will stay on.

4. Disconnect TWS

After a successful connection, if you want to exit the TWS mode, just short press the TWS key.

Other notes:

01- The Master unit will be the left channel and the slave unit will be the right channel.


02- The true wireless stereo function (TWS) supports only two W100 speaker.

03- In TWS mode, except for volume, treble and bass controls, other functions can be operated by either device.

07 Specifications

English

Basic parameters	
Speaker Type	Bluetooth Speaker
Storage Type	Support FAT/FAT32 format Micro SD card/U disk
Power Supply	DC 5V-3A power, the charging time is around 4hours
Technical parameters	
Drivers	4 inch bass + 66 mm dome tweeter speaker + air duct design
Frequency Response	55-20KHZ
Bluetooth Version	Bluetooth 5.3
USB	USB2.0, compatible with USB1.1
Formats on Micro SD card	
Bitrates	MP3:8Kbps-320Kbps WMA:32Kbps-384Kbps WAV:32Kbps-1414Kbps

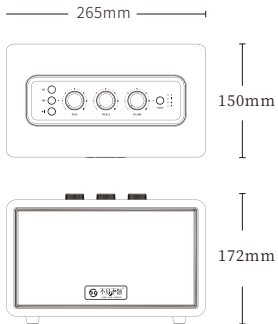 

Product size: 265x150x172mm

Product weight: 3.07kg (including built-in Li-ion Battery)

 
08 注意事项

简体中文


- ◆请阅读本说明。
- ◆请遵循本说明。
- ◆请在常温环境中存放和使用本产品。
- ◆请勿在近热源处使用本产品，如散热器、热风调节器、炉灶或其他产生热量的仪器（包括放大器）。
- ◆请勿堵塞音箱的开口处，勿将物体塞入音箱的通风口或槽隙中。
- ◆请勿丢掷，避免因跌落造成本产品损坏。
- ◆请使用音箱额定电压的电源充电器充电。
- ◆如果连接线与您的设备不匹配，请与销售商联系。
- ◆请将音箱调至合适音量，避免对您的听力造成损害。
- ◆无论设备因何原因损坏，都必须及时请专业维修人员修理，擅自拆卸将使保修失效。
- ◆如果电池更换不当会有爆炸危险，只能用同样类型或等效类型的电池来更换。
- ◆禁止拆解、撞击、挤压或投入火中；若出现严重鼓胀，请勿继续使用；请勿置于高温环境中，电池浸水后禁止使用。
- ◆电池（电池包或组合电池）不得暴露在诸如日照、火烤或类似过热环境中。
- ◆消费者若使用电源适配器充电，则应购买配套使用获得CCC认证并满足标准要求的电源适配器。

09 包装清单

简体中文

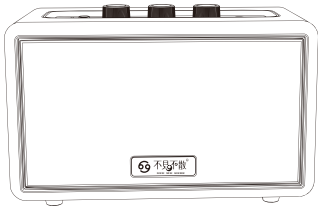

音箱主机 1台

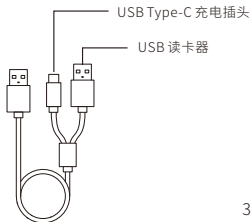 

USB Type-C充电/数据线 1条



 
3.5mm音频线 1条



使用指南 1份


10 按键功能指示

简体中文

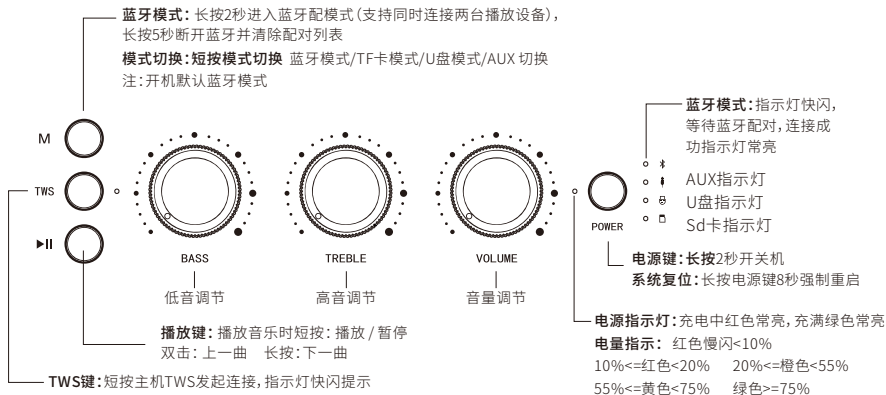

11 接口功能指示

 简体中文

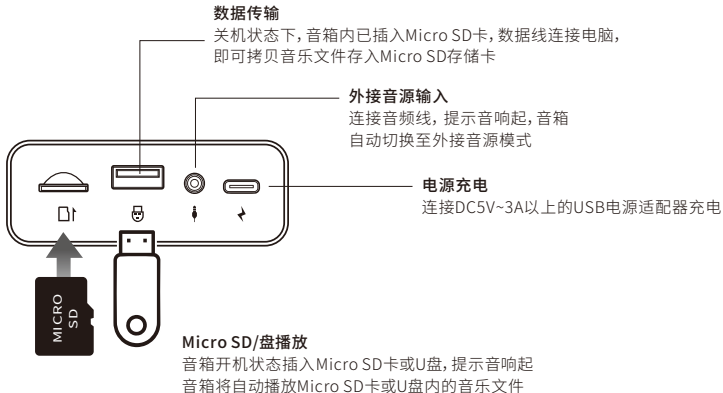

12 蓝牙音频连接

简体中文

1、进入蓝牙配对模式

 
音箱开机，长按M键2秒进入蓝牙配模式，蓝牙指示灯快闪，等待蓝牙配对。

2、连接到移动设备

开启移动设备蓝牙选项，在蓝牙设备列表中找到WAVE W100，连接成功您将听到提示音，同时M键指示灯常亮。

其它：

- 01、长按M键5秒断开蓝牙连接并清除配对列表
- 02、音箱支持同时连接两台播放设备

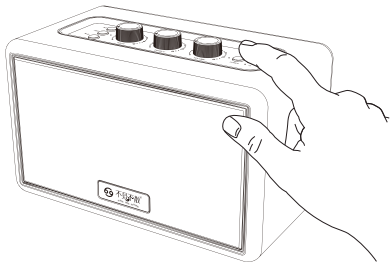

13 TWS无线串联功能

简体中文



主音箱



从音箱

1、主机TWS发起连接

选中一台音箱开机并切换到蓝牙模式，短按TWS键，听到提示音后，音箱进入TWS串联模式，开始主动去搜索从机。

2、从机TWS连接

从机音箱开机并切换到蓝牙模式，断开手机连接，进入配对状态，等待TWS主机连接。

3、TWS连接成功

稍后主从机连接成功，并播报提示音，主机TWS键指示灯慢闪，从机TWS键指示灯常亮。

4、TWS断开操作

连接成功后，如需要退出TWS模式，短按TWS键即可退出。

其它说明：

01、主机为左声道，从音箱为右声道。


02、TWS无线串联，仅支持2个音箱设备无线串联。

03、无线串联成功后，操作任意一音箱功能按键，另一音箱同步相应操作，音量、高低音只有主机有用。

14 技术参数

简体中文

基本参数	
音箱类型	蓝牙音箱
存储类型	支持FAT/FAT32格式 Micro SD卡/U盘
电源供应	DC5V-3A以上的USB电源 充电约4小时左右
技术参数	
扬声器单元	低音4英寸喇叭+高音面板66 mm 球顶喇叭+导相管
频率响应	55-20KHZ
无线连接	Bluetooth 5.3
USB规格	USB2.0、兼容USB1.1
播放功能	
文件格式	MP3:8Kbps-320Kbps WMA:32Kbps-384Kbps WAV:32Kbps-1414Kbps

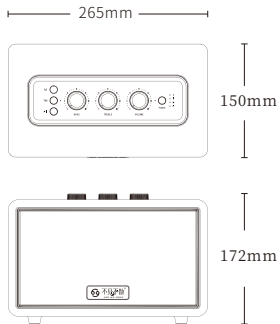 

产品规格:265x150x172mm

产品净重:3.07kg(含内置锂电池)



自助售后服务



不见不散公众号

生产企业:深圳市不见不散电子有限公司

地 址: 深圳市宝安区航空路32号-不见不散视听创新园

电 话: 0755-61181399 网 址: www.hb2099.com